

### Aromatherapy Digital Tower Fan PFT42A5BGB



Warning Notice: Before using this product, please read this manual carefully and keep it for future reference. For additional support, please call customer service at 1-866-646-4332.

The design and specifications are subject to change without prior notice for product improvement. Consult with your dealer or the manufacturer for details.

version A - 04 - 2021 (PREVIEW01)

# **USER MANUAL**



### **OWNER'S MANUAL**

SAFETY PRECAUTIONS	2
IMPORTANT INSTRUCTIONS	3
PARTS AND FEATURES	5
ASSEMBLY INSTRUCTIONS	6
OPERATION INSTRUCTIONS	8
USER SERVICING INSTRUCTIONS	11
CARE AND MAINTENANCE	11

### **Read This Manual**

Inside you'll find many helpful hints on how to use and maintain your appliance properly. Just a little preventive care on your part can save you a great deal of time and money over the life of your appliance. You'll find many answers to common problems in the troubleshooting tips - you should be able to fix most of them quickly before calling service. These instructions may not cover every possible condition of use, so attention to safety details is required when operating and maintaining this product.

### SAFETY PRECAUTIONS

To prevent injury to the user or other people and property damage, the instructions shown here must be followed. Incorrect operation due to ignoring of instructions may cause harm or damage. The different levels of risk is shown by the following indications.

<b>A</b> WARNING	
<b>A</b> CAUTION	
NOTICE	

This symbol indicates a hazardous situation which, if not avoided, could result in death or serious injury.

This symbol indicates a hazardous situation, which, if not avoided, could result in minor or moderate injury.

This symbol addresses practices not related to physical injury.

### **IMPORTANT INSTRUCTIONS**

#### NOTICE

Please read and save these important safety instructions!

When using electrical appliances, basic precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons, including the following:

- 1. Do not leave the fan running unattended.
- 2. Keep electrical appliances out of reach from Children or infirm persons. Do not let them use the appliances without supervision.
- 3. This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to defeat this safety feature.
- 4. If the supply cord is damaged, it must be replaced by manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.
- 5. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.
- 6. When the fan was assembled, the rotor blade guard shall not be taken off anymore.
  - Prior cleaning unplug the fan.
  - The rotor guard shall not be dissembled/opened to clean the rotor blades.
  - Wipe the fan enclosure and rotor blade guard with a slightly damp cloth.

# 

To reduce the risk of fire or electric shock, Do not use this fan with any solid-state speed control device.


### **IMPORTANT INSTRUCTIONS (cont.)**

- 7. This product employs overload protection (fuse). A blown fuse indicates an overload or short-circuit situation. If the fuse blows, unplug the product from the outlet. Replace the fuse as per the user servicing instructions (follow product marking for proper fuse rating) and check the product. If the replacement fuse blows, a short-circuit may be present and the product should be discarded or returned to an authorized service facility for examination and/or repair.
- 8. Do not operate any fan with a damaged cord or plug. Discard fan or return to an authorized service facility for examination and/or repair.
- 9. Do not run cord under carpeting. Do not cover cord with throw rugs, runners, or similar coverings. Do not route cord under furniture or appliances. Arrange cord away from traffic area and where it will not be tripped over.

# 

Always plug appliances directly into a wall outlet/receptacle. Never use with an extension cord or reloadable power tap (outlet/power strip).

# PARTS AND FEATURES

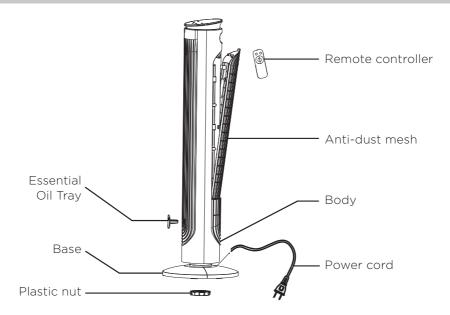

#### NOTICE

 
All the pictures in this manual are for explanation purpose only. Any discrepancy between the real object and the illustration in the drawing shall be subject to the real subject

## **ASSEMBLY INSTRUCTIONS**


#### NOTICE

Please place the machine on the package foam or other soft surfaces and invert it to avoid scratch mark when install the base.


 Take out the two parts of the base from packing box. Then, align the centers of the two parts of the base and place them in a crossed form. Rotate one of the two bases to align its hole site and make it stuck correctly.



2. Detach the plastic nut from the fan body.

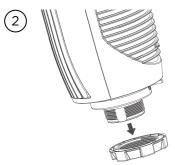

3. Remove the pole, and then directly fix the fan body to the base with a plastic nut.

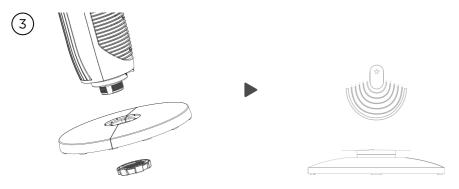

4. **Remote Control Storage:** When the remote control is not in use, it can be placed in the position of the handle in the back shell.



# **OPERATION INSTRUCTIONS**

### **Remote Control Description and Operation**

#### NOTICE

- The remote control should be normally used within 6 meters of the front of the product and 30 degrees of the deviation angle.
- The battery contains many heavy metals, acids and bases, etc., which may threaten human's health. Waste batteries should be recycled separately.

### 1. (b) ON/OFF KEY:

The "ON" key is for switching on the fan .The fan will be started at breeze step. Press the "OFF" key if the fan needs to switch off.

#### 2. +/- SPEED KEY:

When the fan started, press " + " key repeated, the fan will work with "1-2-3-4-5-1" circulatory. Press " - " key repeated, the fan will work with "5-4-3-2-1-5" circulatory.

### 3. (M) MODE KEY:

 
When the machine is on, short press this button to select "normal wind", "wind changes with temperature", "sleep wind", "natural wind"...... Circulating between the four wind classes.

### 4. OSC/LOUVER KEY:

After the fan has started, press this key to select oscillation mode. The lights on the display can indicate fan oscillation mode.

### 5. **•** TIMING KEY:

Press this timer key repeatedly to set the time for air delivery. Increase in increments up to "1-2-3-4-5-6-7-8-9" hours.




#### **Inserting and Replacing Batteries**

- Do not dispose of batteries in fire, batteries may explode or leak.
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable (nickelcadmium) batteries.
- Non-rechargeable batteries are not to be recharged.
- Batteries are to be inserted with the correct polarity.
- Remove batteries when exhausted or when storing product to prevent damage.
- Batteries must be removed from the remote controller before disposal and disposed of per local regulations.

#### NOTICE

- 2 x AAA batteries are not include.
- Use manganese or alkaline batteries of type "AAA".
- DO not use rechargeable batteries.
- 1. Slide the battery compartment Cover.
- 2. Insert the batteries, and make sure that the batteries are placed as shown in the Fig. 1.
- 3. Slide back the battery cover.

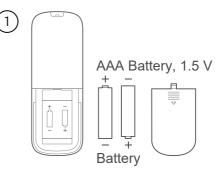

#### **Overheat Protection of the Motor**

The windings of the motor have a thermal-fuse that burns out and the fan switches off and temperature of the motor is no longer going up so that plastic parts of the fan don't subject to deformation so far so to be burned by the overheat if the motor is overheat for any unexpected reason.

# **OPERATION INSTRUCTIONS (cont.)**

#### Buttons on Fan Body / Panel Indication

#### 1. () **ON/OFF KEY:**

Press this key to switch on/switch off the fan.

#### 2. + / - SPEED KEY:

When the fan started, press this key repeated, the fan will work with "1-2-3-4-5-1" circulatory.

# 3. S MODE KEY:

When the machine is on, short press this button to select "normal wind", "wind changes with temperature", "sleep wind", "natural wind"...... Circulating between the four wind classes.



#### 4 • OSC/LOUVER KEY:

After the fan has started, press this key to select oscillation mode. The lights on the display can indicate fan oscillation mode.

### 5. **TIMING KEY:**

 
Press this timer key repeatedly to set the time for air delivery. Increase in increments up to "1-2-3-4-5-6-7-8-9" hours.

#### **Description of Function Icon**

lcon	Function Description
E F	The indicator light is on when the wind changes with temperature.
Ÿ	Light on, start the sleep wind mode, and the fan will automatically adjust the gear cycle according to the established procedure.
$\mathcal{Q}_{\approx}$	The light is on in natural wind mode.

# USER SERVICING INSTRUCTIONS

- 1. Grasp plug and remove from the receptacle or other outlet device. Do not unplug by pulling on cord.
- 2. Open fuse cover. Slide open fuse access cover on top of attachment plug towards blades.



- 3. Remove fuse carefully. Insert the tip of your tool into fuse slot (close with the terminal), then pry the fuse gradually and slowly, but not overexert. If **you'feel** tight, you can try it at several times and pry the fuse little by little. When one side of the fuse has been pryzed, then you can get the fuse out entirely.
- 4. Risk of fire. Replace fuse only with 2.5 Amp, 125 Volt fuse.
- 5. Close fuse cover. Slide closed the fuse access cover on top of attachment plug.
- 6. Risk of fire. Do not replace attachment plug. Contains a safety device (fuse) that should not be removed. Discard product if the attachment plug is damaged.

### CARE AND MAINTENANCE

- Always remove the plug from the power socket.
- Wipe with a soft, damp cloth. Do not use detergents and abrasives.
- Do not allow water or other liquids to enter the internal part of the motor.

