

PELONIS

EN

OWNER'S MANUAL

**MECHANICAL
CERAMIC HEATER
PSH10C1MABV**



Warning Notice: Before using this product, please read this manual carefully and keep it for future reference. For additional support, please call customer service at 1-866-646-4332.

The design and specifications are subject to change without prior notice for product improvement. Consult with your dealer or the manufacturer for details.

PSH10C1MABV
pelonis.com

OWNER'S MANUAL

| | |
|---------------------------------------|----|
| SAFETY PRECAUTIONS | 2 |
| IMPORTANT INSTRUCTIONS | 3 |
| PARTS AND FEATURES | 6 |
| OPERATING INSTRUCTIONS | 6 |
| MODE SETTING | 7 |
| FAN OPERATION | 7 |
| THERMOSTAT CONTROL | 7 |
| SAFETY FEATURE | 8 |
| RESET INSTRUCTIONS | 8 |
| IF YOUR HEATER FAILS TO OPERATE | 8 |
| CARE AND MAINTENANCE | 9 |
| SPECIFICATIONS | 9 |
| SERVICE AND SUPPORT | 10 |
| ONE (1) YEAR LIMITED WARRANTY | 11 |

Read This Manual

Inside you'll find many helpful hints on how to use and maintain your appliance properly. Just a little preventive care on your part can save you a great deal of time and money over the life of your appliance. You'll find many answers to common problems in the troubleshooting tips - you should be able to fix most of them quickly before calling service. These instructions may not cover every possible condition of use, so attention to safety details is required when operating and maintaining this product.

SAFETY PRECAUTIONS

To prevent injury to the user or other people and property damage, the instructions shown here must be followed. Incorrect operation due to ignoring of instructions may cause harm or damage. The different levels of risk is shown by the following indications.



WARNING

This symbol indicates a hazardous situation which, if not avoided, could result in death or serious injury.



CAUTION

This symbol indicates a hazardous situation, which, if not avoided, could result in minor or moderate injury.

NOTICE

This symbol addresses practices not related to physical injury.

IMPORTANT INSTRUCTIONS

CAUTION

Read Rules for Safe Operation and Instructions Carefully.

PLEASE READ AND SAVE THESE IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons, and hyperthermia, including the following:

1. Read all instructions before using this heater.
2. This heater is hot when in use. To avoid burns, do not let bare skin touch hot surface. If provided, always use handles when moving this heater. Keep combustible materials such as furniture, pillows, bedding, papers, clothes and curtains at least 3 feet (0.9m) from the front of the heater and keep them away from the sides and rear.
3. Extreme caution is necessary when any heater is left unattended and or used near children or the disabled.
4. Always unplug the heater when not in use.
5. Do not operate any heater with a damaged cord or plug or after the heater malfunctions, has been dropped or damaged in any manner. Discard heater or return heater to authorized service facility for examination, electrical or mechanical adjustment, or repair.
6. Do not use the heater outdoors.
7. This heater is not intended for use in bathrooms, laundry areas, or similar indoor locations. Never position the appliance where it may fall into a bathtub or come in contact with water.
8. Do not run cord under carpeting. Do not cover cord with throw rugs, runners, or similar coverings. Do not route cord under furniture or appliances. Arrange cord away from traffic area and where it will not be tripped over.
9. CAUTION: This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of shock, this plug is intended to fit only one way in a polarized outlet. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. DO NOT attempt to defeat this safety feature. To do so could result in an electric

IMPORTANT INSTRUCTIONS (cont.)

shock hazard.

10. This heater draws 12.5 amps during operation. To prevent overloading a circuit, do not plug the heater into a circuit that already has other appliances working.
11. CAUTION: It is normal for the plug to feel warm to the touch; however, a loose fit between the AC outlet and plug may cause overheating and distortion of the plug. Contact a qualified electrician to replace loose or worn outlet.
12. To disconnect the heater, first turn controls to the OFF position, then remove plug from outlet. Never pull by the cord.
13. Do not insert or allow foreign objects to enter any ventilation or exhaust opening as this may cause an electric shock or fire, or damage the heater.
14. CAUTION: Always plug heaters directly into a wall outlet. Never use with an extension cord or relocatable power tap (outlet/power strip).
15. A heater has hot and arcing or sparking parts inside. Do not use it in the areas where gasoline, paint, or flammable liquids are used or stored.
16. Use this heater only as described in this manual. Any other use not recommended by the manufacturer may cause fire, electric shock, or injury to persons.
17. The output of this heater may vary and its temperature may become intense enough to burn exposed skin. Use of this heater is not recommended for persons with reduced sensitivity to heat or an inability to react to avoid burns.
18. Don't leave the heater on unattended.
19. To prevent a possible fire, do not block air intakes or exhaust in any manner. Do not use on soft surfaces, like a bed, where openings may become blocked.
20. Hyperthermia can result in death. Symptoms of hyperthermia include high body temperature, headache, nausea, vomiting, tiredness, dizziness, fainting, and rapid pulse. If you begin to experience symptoms related to hyperthermia, turn off the heater and seek medical attention.

IMPORTANT INSTRUCTIONS (cont.)

21. To avoid excessive room temperatures which can cause hyperthermia: DO NOT leave product running unattended in a confined space around infants, or individuals with reduced physical, sensory, or mental capabilities.

SAVE THESE INSTRUCTIONS


ASSEMBLY

This heater is pre-assembled in factory.

ELECTRICAL RATINGS

This product is rated 12.5 amps (1500W) at 120V, 60 Hz.

PARTS AND FEATURES

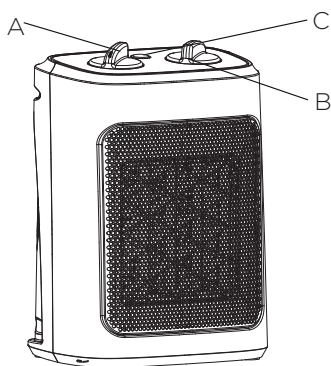

- A Thermostat Control
- B Power and Setting Control
- C Power indicator light

- Place the heater on a firm, level surface free from obstructions, and at least 3 ft.(1.0m) away from any wall or combustible material.

OPERATING INSTRUCTIONS

- Before using the heater, make sure that it is on a flat and stable surface. Damage may occur if it is placed in an incline or decline.
- Avoid overloading your circuit by not using other high wattage appliances in the same outlet. At 1500 Watts, this units draws 12.5Amps.

MODE SETTING


- To begin heating operation, turn Thermostat control clockwise to the highest setting.
- Turn the power and setting switch to your desired heat settings:
 - 1 ~ 700W
 - 2 ~ 900W
 - 3 ~ 1500W
- The power light will remain illuminated during operation.

FAN OPERATION

To use the unit as a cooling air circulator without heat, turn the power and setting control to .

WARNING:

In order to avoid overheating, do not cover the heater.

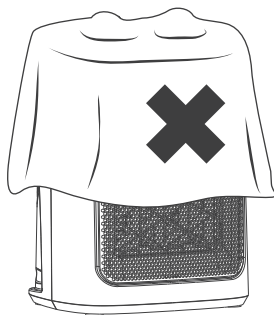

THERMOSTAT CONTROL

- Turn the thermostat control clockwise to the highest position to start heater. Allow heater to operate and warm up the room.
- When the desired temperature/comfort level is reached, lower the temperature setting by turning the Thermostat Control counter-clockwise until the heater stops operating.
- The thermostat will automatically maintain the pre-set temperature level by turning the heat ON and OFF.

NOTE

It is normal for the heater to cycle ON and OFF as it maintains the preset temperature. To prevent the unit from cycling, raise the temperature setting.

SAFETY FEATURE

- **Thermal cut-off:** This heater includes a thermal cut-off that shuts the heater off if it overheats due to abnormal conditions. If this occurs, turn the heater off, unplug it, inspect and remove any objects on or adjacent to the heater. Allow it to cool for a few minutes, and then plug it back in and resume normal operation. This is not a defect!
- **Tip over switch:** This heater includes a safety tip over switch, which will shut the heater off in case it is tipped over. If at any time, the heater does tip over, please place the heater back in the upright position. The heater will resume its normal operation.

RESET INSTRUCTIONS

If the unit shuts down please operate as follows.

1. Turn the unit off
2. Unplug unit wait 10 minutes
3. Plug in and turn on

IF YOUR HEATER FAILS TO OPERATE:

- Be sure it is plugged in and that the electrical outlet is working.
- Check for any obstruction. If you find an obstruction turn the heater OFF. Unplug the heater and wait at least ten minutes for it to cool. Carefully remove the obstruction. Plug the heater back in and restart it as described under OPERATION.
- If the unit is operating the same as mentioned above, remove the plug from the socket and have the appliance serviced by authorized electrician only.

CARE AND MAINTENANCE

We recommend that the heater be cleaned at least once a month and before off-season storage.

- Turn the heater OFF and unplug it. Allow it to cool.
- Use a dry cloth to clean the external surfaces of the heater.

DO NOT USE WATER, WAX, POLISH OR ANY CHEMICAL SOLUTION.

- Clean your heater using the above-mentioned steps, then pack the heater in its original container and store it in a cool dry place.
- This heater does not disassemble.
- The motor is factory lubricated for life, and will require no further lubrication.

SPECIFICATIONS

| | |
|-----------------------------------|-----------------------------------|
| Model No. | PSH10C1MABV |
| Voltage: | 120V 60Hz |
| Current: | Maximum continuous draw:12.5 Amps |
| Power. | 1=700W 2=900W 3=1500W |
| Tolerances on all specifications: | Not exceed than 105% |

TROUBLESHOOTING

If the product does not operate or does not operate properly, first check according to the following list. If the reason the product does not operate or does not operate properly is not included in the following list, the product may have failed. At this time, it is recommended to send the product to the dealer or the Media Service Center for treatment.

| Problem | Possible Causes | Solution |
|--|---|--|
| The product is not powered on | Power supply issue: power cord not plugged in or socket not powered on. | Check if the power supply for the heater is normal. |
| | | Check if the power plug is firmly inserted. |
| | | Check if the power cord is damaged or broken. If there is an issue with the power cord, please have a professional check and repair it. |
| | Dumping switch failure: the dumping switch did not trigger correctly, and the product has overturned | Do not place on soft surfaces such as blankets. The product should be placed on a flat, level, and stable surface. |
| | Overheat protection has been triggered. | Unplug and allow it to cool. Remove any objects on or near the heater. |
| The product is powered on but does not heat up | The temperature control knob is set to a temperature lower than the ambient temperature. | Adjust the temperature control knob to increase the set temperature. |
| Suddenly stops during heating | The product stops heating after reaching the set heating temperature. | This is a normal phenomenon. If the product stops heating frequently, please increase the set temperature. |
| | The heater is tipped over. | Place it on a flat level and stable surface. |
| | Automatic shutdown mode will be activated after a long period of inactivity. | This is a common protection function for electronic products. If the product works continuously for a long time without any button operation, it will automatically shut down. |

SERVICE AND SUPPORT

In the event of a warranty claim or if service is required for this product, please contact us at the following:

Toll Free: 1-866-646-4332

For questions or comments, please write to:

Customer Service:

Midea America Corp.

300 Kimball Drive

Parsippany, NJ, USA 07054

Email: customersupport@pelonis.com

For your records, staple your sales receipt to this manual and record the following:

DATE OF PURCHASE: _____

PLACE OF PURCHASE: _____

(STAPLE SALES RECEIPT HERE)

**NOTE: PROOF OF PURCHASE IS REQUIRED FOR ALL
WARRANTY CLAIMS**

PRINTED IN VIETNAM

ONE (1) YEAR LIMITED WARRANTY

- Please read all instructions before attempting to use this product.

Midea America Corp. warrants as limited herein to the original purchaser of retail that each new heater, shall be free of defects in material and workmanship for a period of one (1) year from the date of delivery. This one (1) year warranty is limited to the heating elements, motor, and electric control circuit board. The date of delivery establishes the warranty period, should service be required.

In the event of malfunctions or failure of your Pelonis heater, simply deliver or send the heater postage prepaid along with PROOF OF PURCHASE, within the warranty period of one (1) year, to Midea America Corp.. Midea America Corp. reserves the right to inspect the claimed defective part or parts to determine if the defect or malfunction complaint is covered by this warranty. Midea America Corp. shall, within sixty (60) days after receipt of the product, at its option, repair and/or replace the defective part or parts free of charge. This warranty shall only cover defects arising from normal usage. Midea America Corp. assumes no responsibility whatsoever if the heater should fail during the warranty period by reason of:

- Misuse, negligence, physical damage or accidents.
- Lack of maintenance (see instructions for proper maintenance).
- Repair by any unauthorized party during the warranty period.
- Damage caused by connection to an improper input voltage (see specification label on your heater).

Midea America Corp. makes no further warranties or representations, express or implied except those contained herein. No representative or dealer is authorized to assume any other liability regarding the heater. The duration of the implied warranty granted under State law, including warranties of merchantability and fitness for particular purpose are limited in duration should the duration of the express warranty grant it hereunder. Midea America Corp. shall in no event be liable for direct, indirect, special or consequential damages.

Some states do not allow limitations on how long an implied warranty lasts, and/or the above limitations or exclusion may not apply to you. This warranty gives you specific legal rights and you may have other rights which vary from state to state.

