

 
PELONIS

OWNER'S MANUAL

20" BOX FAN

MODEL:PSF20B3ABB

SKU# 6211130

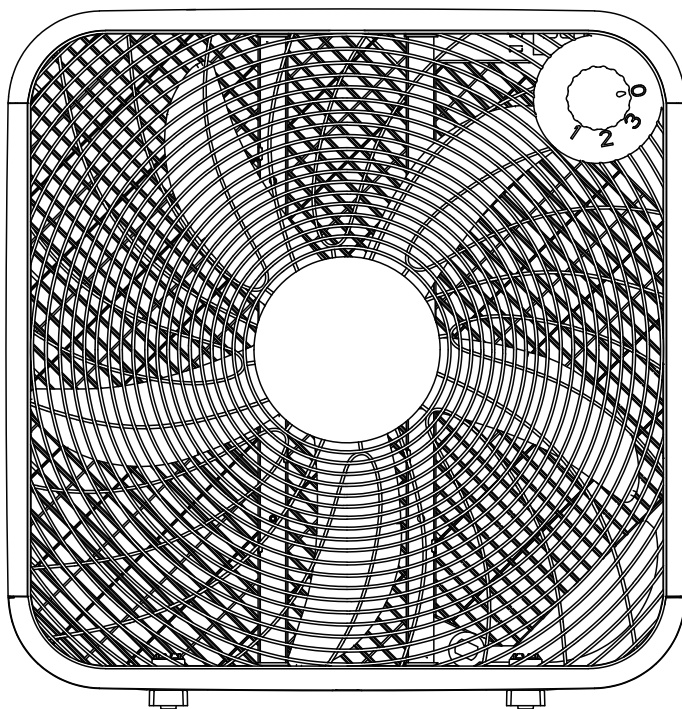

READ AND SAVE THESE INSTRUCTIONS

CAUTION

This fan is for residential use only. It is not intended to be used in commercial or industrial settings.

WARNING

1. This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit in a polarized outlet only one way. If plug does not fit fully in the outlet, reverse plug. If it still does not fit, contact a qualified electrician. Do not attempt to defeat this safety feature.
2. Do not leave the fan running unattended.
3. To reduce the risk of fire or electric shock, do not use this fan with any solid-state speed control device.

RULES FOR SAFE OPERATION

1. Never insert fingers, pencils, or any other object through the grilles when fan is running.
2. Disconnect fan when moving from one location to another.
3. Disconnect fan when removing grilles for cleaning.
4. Be sure fan is on a stable, flat surface when operating.
5. Rules about cord and plug colon:
 - (1) This product employs overload protection (fuse). A blown fuse indicates an overload or short-circuit situation. If the fuse blows, unplug the product from the outlet. Replace the fuse as per the user servicing instructions (follow product marking for proper fuse rating) and check the product. If the replacement fuse blows, a short-circuit may be present and the product should be discarded or returned to an authorized service facility for examination and/or repair.
 - (2) Do not operate any fan with a damaged cord or plug. Discard fan or return to an authorized service facility for examination and/or repair.
 - (3) Do not run cord under carpeting. Do not cover cord with throw rugs, runners, or similar coverings. Do not route cord under furniture or appliances. Arrange cord away from traffic area and where it will not be tripped over.

COMPONENTS

1. Rotary switch 2. Fan Body 3. Foot

ASSEMBLY

1. Unpack the packaging box and remove fan.
2. Place the fan upside down and rotate the feet 90 degrees counterclockwise so the feet are perpendicular to the fan body. This will stabilize the fan for use. (See Fig. 1)
3. Flip the fan right side up for use. (See Fig. 2)

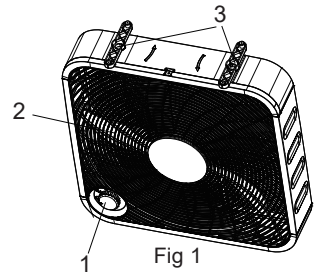 


Fig 1

OPERATING INSTRUCTIONS

1. Plug the fan into any standard household outlet.
2. The Speed Control Knob will turn the fan on and off and also allow you to rotate between speeds.
3. Speeds - Position: 1-low 2-medium 3-high 0-off

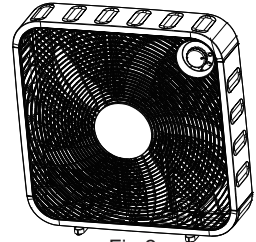 


Fig 2

 
CLEANING AND MAINTENANCE INSTRUCTIONS

The fan requires little maintenance. Do not try to fix it yourself. Consult qualified service personnel if service is needed.

1. Before cleaning, make sure fan is disconnected from power source.
2. To ensure adequate air circulation to the motor, keep vents at the rear of the motor housing clear from dust.
3. Please wipe the exterior parts with a soft cloth. Do not use any abrasive detergents or solvents.
4. Do not allow water or any other liquid into the motor housing or interior parts.
5. Exterior plastic parts can be cleaned with a damp cloth or sponge.

USER SERVICING INSTRUCTIONS

- a) Grasp plug and remove from the receptacle or other outlet device. Do not unplug by pulling on cord.
- b) Open fuse cover. Slide open fuse access cover on top of attachment plug toward blades.
- c) Remove fuse carefully. Insert the tip of your tool into fuse slot (close to the terminal), then pry the fuse gradually and slowly, but not overexert. If fuse feels tight, you can try several times and pry the fuse little by little. When one side of the fuse has been lifted, then you can get the fuse out entirely.

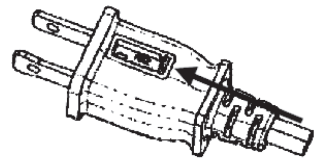

- d) Replace fuse only with 2.5 Amp, 125 Volt fuse. Use only approved fuse. Improper replacement of fuse can create a risk of fire.
- e) Close fuse cover. Slide closed the fuse access cover on top of attachment plug.
- f) Do not replace attachment plug. Contains a safety device (fuse) that should not be removed. Discard product if the attachment plug is damaged. Tampering with plug will create a risk of fire.

Notice:

- 1. When replacing fuse, pry gently and remove from the plug carefully to avoid causing an accident or risk damaging plug.
- 2. If fuse is difficult to remove, follow the steps in USER SERVICING INSTRUCTIONS on page 2.

CLEANING

- 1. Exterior plastic parts can be cleaned with a damp cloth or sponge.
- 2. Dry all parts completely before reassembling and reconnecting to power source.

WARNING: This appliance has a polarized plug (one blade is wider than the other). The polarized plug is not intended to be used in non-polarized outlets (having both slots the same size). To reduce the risk of electric shock, this plug is intended to fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug, if it still does not fit, contact a qualified electrician. Do not attempt to defeat this safety feature.

SERVICE & SUPPORT

In the event of a warranty claim or if service is required for this product, please contact us at the following:

Toll Free: 1-866-646-4332

Email us at: customerservice@supportuscenter.com

For questions or comments, please write to:

Midea America Corporation

Customer Care Center

5 Sylvan Way, Suite 100

Parsippany, NJ 07054

For your records, staple your sales receipt to this manual and record the following:

DATE OF PURCHASE: _____

PLACE OF PURCHASE: _____

(STAPLE SALES RECEIPT HERE)

**NOTE: PROOF OF PURCHASE IS REQUIRED FOR ALL
WARRANTY CLAIMS**

ONE (1) YEAR LIMITED WARRANTY

- Please read all instructions before attempting to use this product.

Midea America Corporation, referred to hereafter as Midea America, warrants as limited herein to the original purchaser of retail that each new Pelonis Fan, shall be free of defects in material and workmanship for a period of one (1) year from the date of original purchase. This one (1) year warranty is limited to the fan motor, fan blades, and electric control circuit board.

In the event of malfunctions or failure of your Pelonis Fan, simply deliver or send the product, postage prepaid along with PROOF OF PURCHASE, within the warranty period of one (1) year, to Midea America. Midea America reserves the right to inspect the claimed defective part or parts to determine if the defect or malfunction complaint is covered by this warranty. Midea America shall, within sixty (60) days after receipt of the product, at its option, repair and/or replace the defective part or parts free of charge. This warranty shall only cover defects arising from normal usage. Midea America assumes no responsibility whatsoever if the Pelonis Fan should fail during the warranty period by reasons of:

- Misuse, negligence, physical damage or accidents.
- Lack of maintenance (see cleaning).
- Repair by any unauthorized party during the warranty period.
- Damage caused by connection to an improper input voltage (see specifications).

Midea America makes no further warranties or representations, express or implied except those contained herein. No representative or dealer is authorized to assume any other liability regarding the Pelonis Fan. The duration of the implied warranty granted under State law, including warranties of merchantability and fitness for particular purpose are limited in duration should the duration of the express warranty grant it hereunder. Midea America shall in no event be liable for direct, indirect, special or consequential damages.

Some states do not allow limitations on how long an implied warranty lasts, and/or the above limitations or exclusion may not apply to you. This warranty gives you specific legal rights and you may have other rights, which vary from state to state.

Should your Pelonis Fan fail to operate under the terms of this limited warranty, contact Midea America at 1-866-646-4332 (M-F 9:00am to 5:00pm CST).

