

PELONIS

OWNER'S MANUAL



**Ceramic Tower Heater
MODEL: HC-1010**

**PLEASE READ AND SAVE THESE
INSTRUCTIONS**

IMPORTANT INSTRUCTIONS

PLEASE READ AND SAVE THESE IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons, including the following:


1. Read all instructions before using heater.
2. This heater is hot when in use. To avoid burns, do not let bare skin touch hot surface. If provided, always use handles when moving this heater. Keep combustible materials such as furniture, pillows, bedding, papers, clothes and curtains at least 3 feet (0.9m) from the front of the heater and keep them away from the sides and rear.
3. Extreme caution is necessary when any heater is used by or near children or invalids and whenever the heater is left operating and unattended.
4. Always unplug the heater when not in use.
5. Do not operate any heater with a damaged cord or plug or after the heater malfunctions, has been dropped or damaged in any manner. Discard heater or return heater to authorized service facility for examination, electrical or mechanical adjustment, or repair.
6. Do not use the heater outdoors.
7. This heater is not intended for use in bathroom, laundry areas and similar moist indoor locations. Never locate heater where it may fall into a bathtub or other water container.
8. Do not run cord under carpeting. Do not cover cord with throw rugs, runners, or similar coverings. Do not route cord under furniture or appliances. Arrange cord away from traffic area and where it will not be tripped over.
9. **CAUTION:** This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of shock, this plug is intended to fit only one way in a polarized outlet. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. **DO NOT** attempt to defeat this safety feature. To do so could result in an electric shock hazard.
10. This heater draws 12.5 amps during operation. To prevent overloading a circuit, do not plug the heater into a circuit that already has other appliances working.
11. **CAUTION:** It is normal for the plug to feel warm to the touch; however, a loose fit between the AC outlet (receptacle) and plug may cause overheating and distortion of the plug. Contact a qualified electrician to replace loose or worn outlet.

12. To disconnect the heater, first turn controls to off, then remove plug from outlet. Never pull by the cord.
13. Do not insert or allow foreign objects to enter any ventilation or exhaust opening as this may cause an electric shock or fire, or damage the heater.
14. To prevent a possible fire, do not block air intakes or exhaust in any manner. Do not use on soft surface, like a bed, where openings may become blocked.
15. A heater has hot and arcing or sparking parts inside. Do not use it in the areas where gasoline, paint, or flammable liquids are used or stored.
16. Use this heater only as described in this manual. Any other use not recommended by the manufacturer may cause fire, electric shock, or injury to persons.
17. **CAUTION:** Always plug heaters directly into a wall outlet/receptacle. Never use with an extension cord or reloadable power tap (outlet/power strip).
18. The output of this heater may vary and its temperature may become intense enough to burn exposed skin. Use of this heater is not recommended for persons with reduced sensitivity to heat or an inability to react to avoid burns.
19. Disposal of oil contained within should be in accordance with applicable regional, national, and local laws and regulations.
20. **CAUTION:** TO PREVENT ELECTRIC SHOCK, MATCH WIDE BLADE OF PLUG TO WIDE SLOT AND FULLY INSERT.

21. **“SAVE THESE INSTRUCTIONS”**

FEATURES AND BENEFITS

■ FEATURES

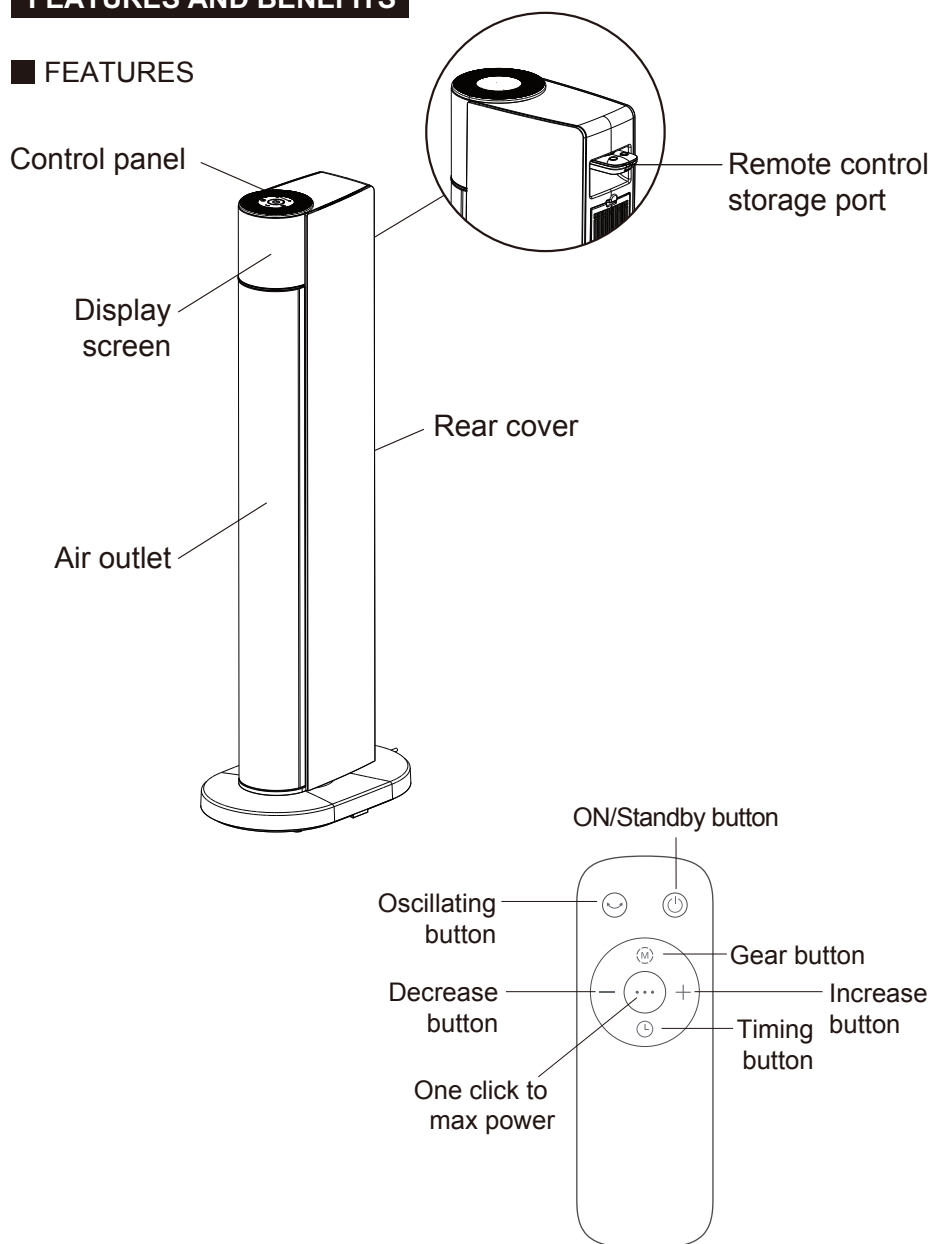


BEFORE USING FOR THE FIRST TIME





- Whether the power cord is in good condition.
- The power supply for the product is 120V AC, and the carrying capacity of the socket shall not be lower than 12.5A. Otherwise, accidents may occur.

OPERATION INSTRUCTIONS

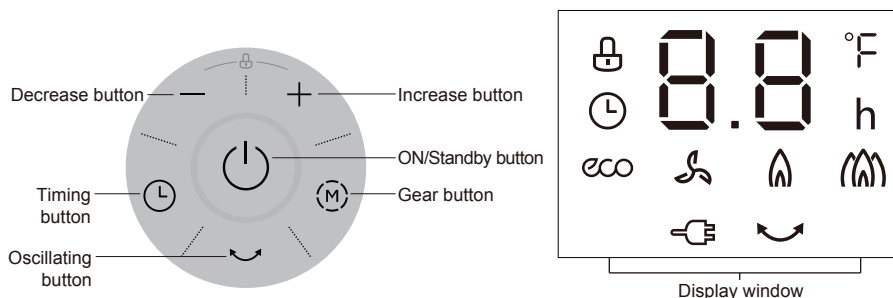[Start the machine]

Plug in the power and press the ON/Standby button of the control panel to start the machine. After starting, the machine will run in the previous mode.



Button	Functional description
Power/ Standby button 	Plug in the power, press the "ON/Standby" button to enter the ON mode, and the heater starts to work. The whole machine runs at the previous mode and temperature. Press the "On/Standby" button in the startup mode to enter the standby mode, and the heater will stop working.
Gear button 	After starting up, press the "gear" button repeatedly, and the heater will switch according to the recursive sequence of "energy-saving mode → breeze → low warm air → high warm air".
+/- button	When the machine is in operation, press the "+" or "-" button to set the operating temperature. The temperature setting range is 40 - 95°F, with an interval of 1°F between adjacent temperature values. If there is no operation within 3 seconds after setting, the set temperature value will be confirmed and displayed. When the room temperature reaches the set temperature, the display screen flashes for 10s, and the heating element stops working. When the temperature is lower than the set temperature, the machine starts heating again.
Timing button 	Under ON mode, press the button to select the timing shutdown setting, the timing indicator lights up, the temperature display icon goes out, and the display screen flashes to display the remaining time set last time. The shutdown time can be set through the "+" and "-" buttons, with the setting range of 0-24 hours. If there is no button action within 5 seconds, it will confirm the timing time and exit the timing setting state. If the set timing time is 0, it means to cancel the timing setting. If the set timing time is not 0, the machine automatically shuts down and goes into standby mode when the set time is reached, and the timing indicator is out. Set the timing time again after setting the timing time, and the timing is also re-timed. In the standby mode, you press the button to make reserved startup setting, and the operation is the same as timed shutdown. Timer time unit is hour.
Oscillating button 	Under ON mode, press the button to turn on the oscillating function, and then press the button to turn off the oscillating function.

■ Screen-off function

When the machine is in the working state, the screen will go out automatically if there is no operation for 1 minute, and only the operation mode logo will be kept on. Press and hold the "⌚" and "-" buttons for 2 seconds at the same time to turn off the screen extinguishing function, then press and hold the "⌚" and "-" buttons for 2 seconds at the same time again to turn on the screen extinguishing function.

■ Short-circuit Temperature Control Sensor, Open Circuit Protection

In any mode, if the temperature limiter has short circuit and open circuit protection, and the digital screen displays "E1" or "E2" and keeps flashing, pressing any button will not work. The buzzer sounds 10 times.

■ Safety protection

When it is in the ON state and indoor ambient temperature is higher than 122°F, the system will turn off all the outputs, the digital screen will display "FF" and flash at a frequency of 1 time/second; then, pressing any button will not work, and the protection can only be withdrawn if the power is cut off.

■ Tip-over protection

Either in the ON or OFF state, when the machine dumps, the system will immediately turn off all the heating components and display "E3"; then, pressing any button will not work.

■ Turn Off Buttons' Decorative Lights and Buzzers

In the ON state, press the "timing button" and "gear button" for 2 seconds at the same time to turn off the output of the buttons' decorative lights and buzzers. Repeat the operation to turn on this function.

■ Child Lock

Either in the ON or OFF state, the child lock will be opened when you press and hold "+" and "-" buttons simultaneously for 2 seconds for the first time. Repeat the operation to turn off this function.

■ Remote controller

Remote control usage: The key function is consistent with those on the operation panel. Note: Press the "<⋯>" button of the remote control to enter the highly warm air mode with one button.

■ ECO mode

In ECO mode, press "+, -" to set the required temperature. When the ambient temperature is lower than the set temperature (lower than 4°F or above), the unit will be heated at a highly warm state; when the ambient temperature is close to the set temperature (lower than 4°F), the unit will be heated in a lower warm state; when the ambient temperature is higher than the set temperature, the unit will stop heating.

BATTERY WARNING

1. Do not dispose of batteries in fire, batteries may explode or leak.
2. Do not mix old and new batteries.
3. Do not mix alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries.
4. Non-rechargeable batteries are not to be recharged.
5. Batteries are to be inserted with the correct polarity.
6. Exhausted batteries are to be removed from the product.
7. The batteries must be removed from the remote controller before it is scrapped and that they are disposed of safely.

MAIN PARAMETERS

Rated voltage: 120V ~ 60Hz

Model	Power adjustment range	
	Low-gear	High gear
HC-1010	800	1500

TROUBLESHOOTING

If the unit does not operate or does not operate properly, first check according to the following reasons. It is recommended to contact the Customer Service Dept for repair.

Problem	Possible cause	Solutions
After the power is switched on, the power indicator does not turn on, and the machine does not work.	The plug is not plugged in properly.	Check whether the plug is inserted in the socket properly.
Shutdown suddenly occurs in heating.	The temperature exceeds the threshold of the temperature limit.	Allow unit to cool down and then retry use.

SERVICE & SUPPORT

In the event of a warranty claim or if service is required for this heater, please contact us at the following:

Toll Free: 866 646 4332

Email us at: customerservice@supportuscenter.com

For questions or comments, please write to:

Midea America Corporation

Customer Care Center

Midea America Corp

5 Sylvan Way, Suite 100

Parsippany, NJ 07054


For your records, staple your sales receipt to this manual and record the following:

DATE OF PURCHASE: _____

PLACE OF PURCHASE: _____

[STAPLE SALES RECEIPT HERE]

**NOTE: PROOF OF PURCHASE IS REQUIRED FOR ALL
WARRANTY CLAIMS
PRINTED IN CHINA**



Free 3 months
extension* of the
original limited warranty
period! Simply text a
picture of your proof of
purchase to:

1-844-224-1614

*The warranty extension is for the
three months immediately following
the completion of the product's
original warranty period.

