

 


# User Manual

## Oil Filled Heater

MODEL: PSHO07JR4AGB

Please read this manual carefully and keep it for future reference.

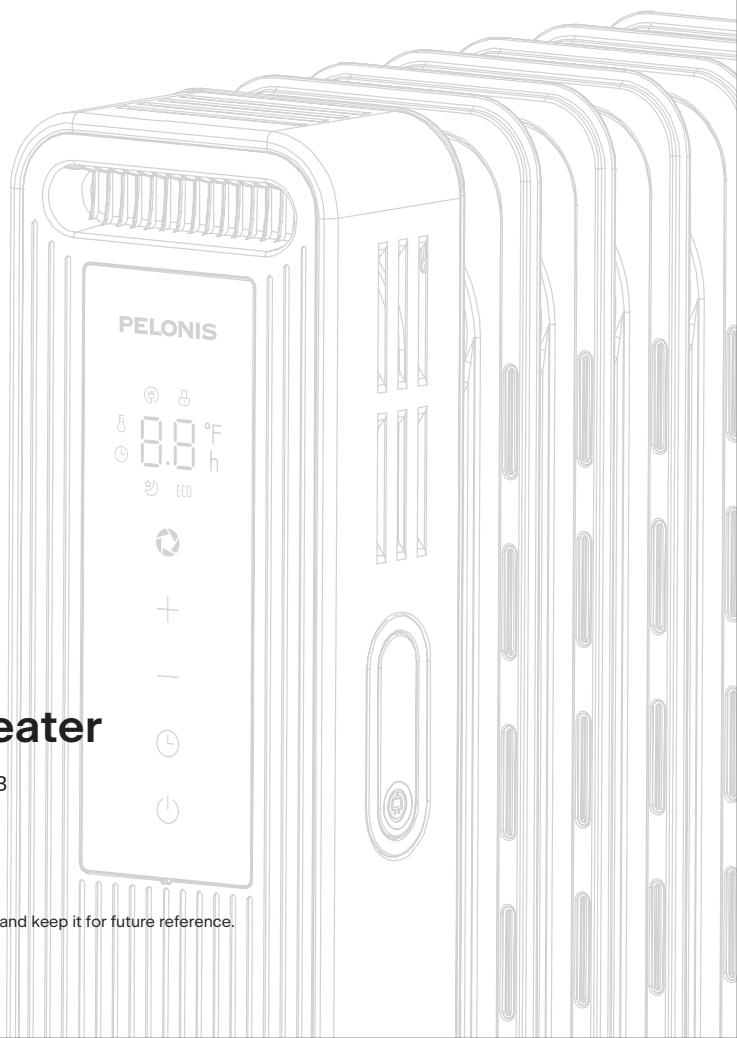



# **Thanks for Choosing PELONIS!**

Your support is pivotal and  
we hope you enjoy it!

# Contents

<b>Important Safeguards</b>	01
<b>Product Overview</b>	04
<b>Quick Start Guide</b>	05
<b>Operating Instructions</b>	06
<b>Troubleshooting</b>	11
<b>Cleaning And Maintenance</b>	12
<b>Specifications</b>	13

# Important Safeguards

## PLEASE READ AND SAVE THESE IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons, and hyperthermia, including the following:

### CAUTION

1. Read all instructions before using this heater.
2. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
3. Children should be supervised to ensure that they do not play with the appliance.
4. CAUTION: Some parts of this product can become very hot and cause burns. Particular attention has to be given where children and vulnerable people are present.
5. CAUTION-Risk of fire-Do Not Operate without Legs (Base) Attached.

 
## **WARNING**

1. Do not operate any heater with a damaged cord or plug or after the heater malfunctions, has been dropped or damaged in any manner. Discard heater, or return to authorized service facility for examination and/or repair.
2. This heater is hot when in use. To avoid burns, do not let bare skin touch hot surfaces. If provided, use handles when moving this heater. Keep electrical cords, furnishings and any other combustible materials, such as furniture, pillows, bedding, papers, clothes, and curtains at least 3 feet (0.9 m) from the front of the heater and keep them away from the sides and rear.
3. Do not use outdoors.
4. This heater is not intended for use in bathrooms, laundry areas and similar indoor locations. Never locate heater where it may fall into a bathtub or other water container.
5. A heater has hot and arcing or sparking parts inside. Do not use it in areas where gasoline, paint, or flammable liquids are used or stored.
6. Extreme caution is necessary when any heater is used by or near children or invalids and whenever the heater is left operating and unattended.
7. Always unplug heater when not in use.
8. Do not run cord under carpeting. Do not cover cord with throw rugs, runners, or similar coverings. Do not route cord under furniture or appliances. Arrange cord away from traffic area and where it will not be tripped over.
9. To disconnect heater, press the button to off, then remove plug from outlet.
10. Do not insert or allow foreign objects to enter any ventilation or exhaust opening as this may cause an electric shock or fire, or damage the heater.
11. The heater must not locate immediately below a socket-outlet.
12. **WARNING:** Do not use this heater in small rooms when they are occupied by persons not capable of leaving the room on their own, unless constant supervision is provided.
13. This heater is filled with a precise quantity of special oil. Repairs requiring opening of oil-container are only to be made by the manufacturer or his service agent who should be contacted if there is an oil leak. When scrapping the heater, follow the regulations concerning the disposal of oil.


14. To prevent a possible fire, do not block air intakes or exhaust in any manner. Do not use on soft surfaces, like a bed, where openings may become blocked.
15. Use this heater only as described in this manual. Any other use not recommended by the manufacturer may cause fire, electric shock, or injury to persons.
16. Always plug heaters directly into a wall outlet/receptacle. Never use with an extension cord or relocatable power tap.
17. Hyperthermia can result in death. Symptoms of hyperthermia include high body temperature, headache, nausea, vomiting, tiredness, dizziness, fainting, and rapid pulse. If you begin to experience symptoms related to hyperthermia, turn off the heater and seek medical attention.
18. To avoid excessive room temperatures which can cause hyperthermia: DO NOT leave product running unattended in a confined space around infants, or individuals with reduced physical, sensory, or mental capabilities.
19. This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit into a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. DO NOT attempt to defeat this safety feature.

## **SAVE THESE INSTRUCTIONS**

# Product Overview

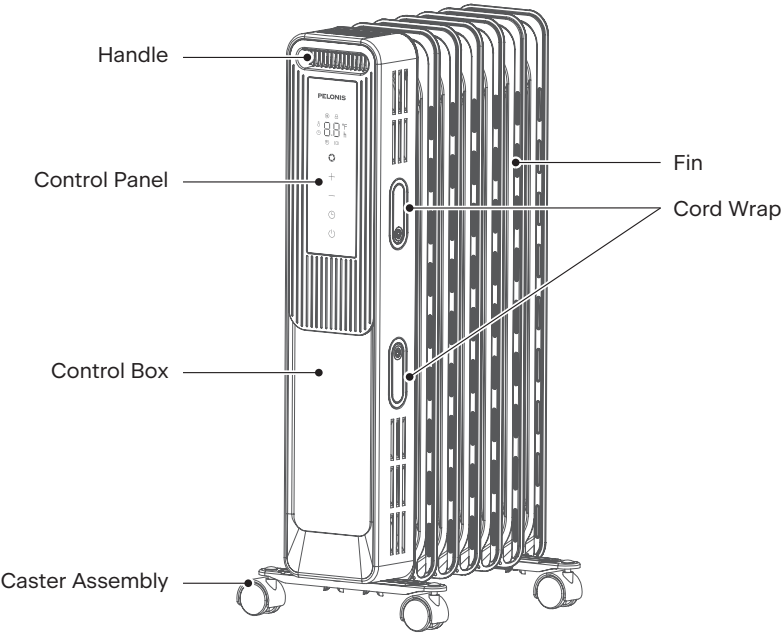

## Accessories

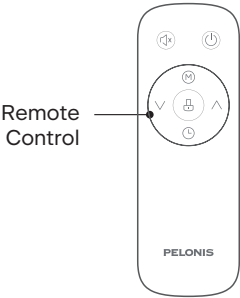 

### [Note]


All the pictures in this manual are for explanation purpose only. Any discrepancy between the real object and the illustration in the drawing shall be subject to the real object.

## Quick Start Guide

### Installation of the caster plate assemblies


1. Place the heater body inversely with the bottom upward.
2. Tighten two caster plate assemblies to the body with wing nuts as shown in Figure 1:

 Figure 1

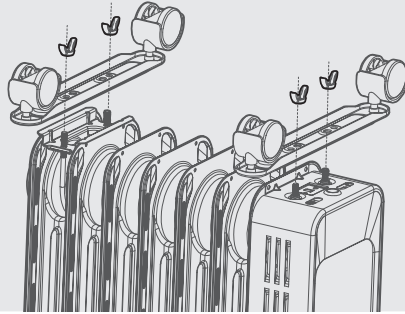

3. Place the heater upright after installing the caster plate assemblies.  
Note: Wheels should be touching the ground.

 Figure 2

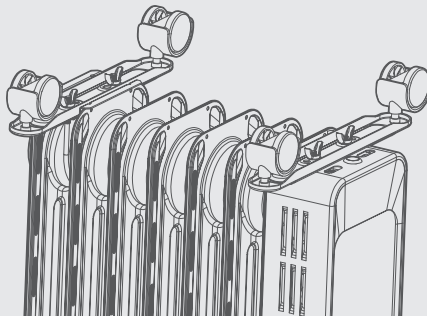



# Operating Instructions

## Inspect Before Use

The power cord shall not be damaged or fractured.

 
[Note]





To use the machine for the first time or to re-insert the plug, please pay attention to check whether the plug is firmly inserted into the receptacle.

## Inspection Method

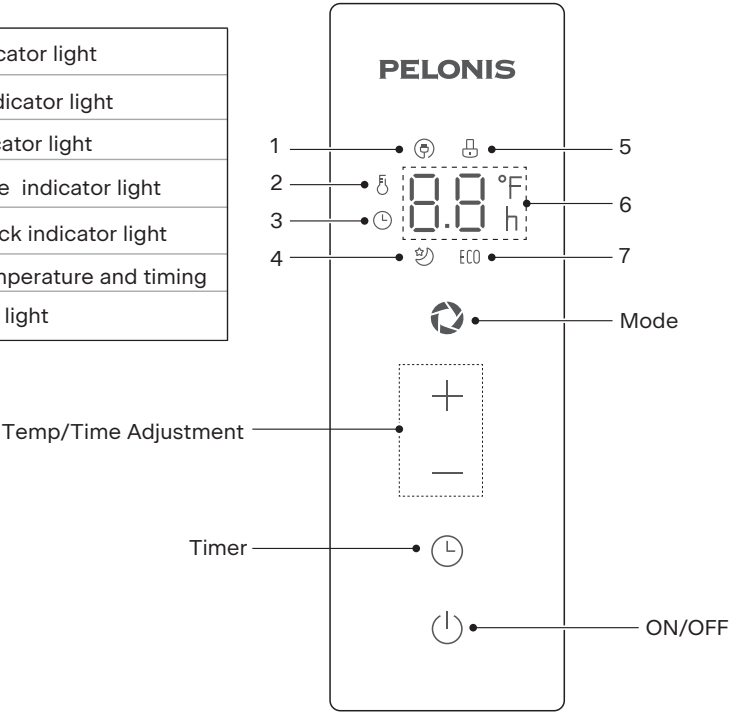


 
Insert the power plug into the socket and power on the unit; after approx 30 mins, turn off and pull out the plug. Check whether the plug pins are hot; replace the receptacle if so (more than about 122°F) to avoid burning the plug or even causing a fire caused by overheating of the receptacle due to poor contact.

1	Power indicator light
2	Heating indicator light
3	Timer indicator light
4	Sleep mode indicator light
5	Children lock indicator light
6	Display temperature and timing
7	ECO mode light




Button	Function Description
 ON/OFF	<ul style="list-style-type: none"> <li>• Press "On/OFF icon" to turn the unit on/off.</li> <li>• After turning the unit off it is recommended to unplug the heater.</li> </ul>
 Mode	<ul style="list-style-type: none"> <li>• Repeatedly press "insert Mode icon" to cycle through the different modes:  H1 - Low Heat  H2 - Medium Heat  H3 - High Heat  ECO  Sleep</li> </ul>
 Timer	<ul style="list-style-type: none"> <li>• Turn off at a set time  Press timing key "⌚" gently to enter the interface to set turn-off at a set time. Press "+" key or "-" key to set timing alarm for turn-off; long press "+" key or "-" key to rapidly set timing for turn-off; timing is up, the apparatus is closed down.  A: Timing range is 0~24h; pressing "+" or "-" each time means an additional or decreased 1 hour. If the set value is 0h, press "-" key, and the setting time is changed to 24h; if the set value is 24h, press "+" key, and setting time is changed to 0h. If the set value is 0h, timing is cancelled; if such value is not 0h, timing is started. Exit the setting state after 5 seconds of inactivity on the timer.  B: If the timing time is set well, press on-off key "⏻" for direct power off, with timing cancel.  C: After booting the timing, press the timing key "⌚" to check remaining timing duration at any time and reset the timing. Within the timing range, if the heater stops or is restarted under the temperature control status, the timing is normal for timekeeping all the time. It is not affected by stopping or restarting. In the case of shutdown or power-off within timing range, the timing is reset.</li> </ul>
 Increase Decrease	<ul style="list-style-type: none"> <li>• Temperature setting: For work status, press on "+" Key or "-" Key to set temperature; long press "+" Key or "-" key to set the temperature rapidly;</li> <li>• Timing setting: Press the "+" or "-" button to increase or decrease the set time duration for the timer on the heater.</li> </ul>


## Children Lock Function

It is effective in power on and standby mode. Press and hold the “” key and the “” key for 3 seconds to activate or deactivate the children lock function of the button. Alternatively, you can press the “” key on the remote control to activate or deactivate the children lock function of the button. Remarks: When the child lock is activated, you can click the “” button to turn off the heater; however, when the child lock is active, you cannot turn on the heater and must first deactivate the child lock before turning it on.

## Mute Function

This mode is effective when turned on or in standby mode.

Long press the “” button on the control panel for 2 seconds to activate or deactivate the mute function of the button.

Press the “” button on the remote control to activate or deactivate the mute function of the button.

## Safety protection function

 
If the indoor temperature (Th) exceeds 122°F, all output commands are terminated, the buzzer gives off an urgent sound for 10 times and digital screen displays “FF”, with 75s for 1Hz, whether standby or power-on. Even if the environmental temperature is less than 122°F, the running or operation cannot be recovered, as long as the protection exists; the only thing is to unplug the power cable, and then power up for operation.

## Movement of the heater

To move the heater, turn it off first, and pull out the power plug; then push the body to make the four casters below the body to roll.

## Remote Control Operation

- Point the remote control at the control panel of the heater and press the desired button. The remote control will work at distances of up to 15 ft. and at an angle of 30 deg. to the right/left of the control panel.
- The remote control does not support long button or combination button operations.
- Properly dispose/recycle old batteries per your local agency.

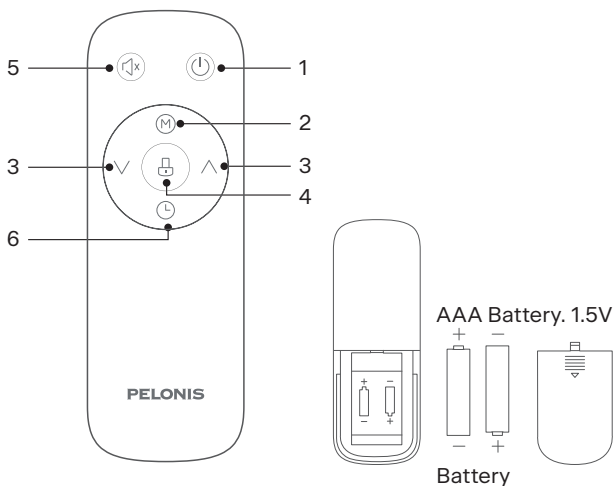

No	Key	Function Description
1		• ON/OFF
2		• Mode
3		• Use the symbols as depicted instead of the bullets
4		• Child Lock ON/OFF
5		• Mute/Unmute
6		• Timer

## Batteries (included)

- Slide to open the battery compartment cover.
- Insert the batteries, and make sure that batteries are placed as shown in Fig. 1:
- Slide the battery compartment cover into position as shown in Fig. 2:

 


Fig. 1

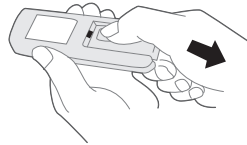 


Fig. 2

### [Note]

- Use manganese or alkaline batteries of type “AAA”. DO not use rechargeable batteries.
- Do not dispose of batteries in fire, batteries may explode or leak.
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries.

## Troubleshooting

Operation of your appliance can lead to errors and malfunctions. The following table contains possible causes and notes for resolving an error message or malfunction. It is recommended to read the below table carefully when experiencing an error or malfunction. If the issue can't be resolved from the table please contact your local service center.

Fault symptoms	Fault description
The power indicator light does not turn on and the device does not work after connecting to the power source.	The plug is not inserted properly. Please check if the plug is correctly inserted into the receptacle.
The device suddenly stops heating during operation.	The temperature has exceeded the threshold of the limit switch. Please wait for the device to cool down before using it again.
The plug overheats or ignites.	The current overload of the receptacle or the aging of the receptacle causes the contacts to loosen. Please use receptacles that meet the requirements and standards of their respective countries or regions.
Burnt odor and inability to operate (caused by the accumulation of dust inside).	The machine is used in an environment with a lot of dust or hair. Recommended to place the machine in a clean and well-ventilated area.
The temperature sensor is not accurate.	The space heater is a local heating product, and it is normal to have inconsistent temperatures in different areas of the room when in use.

## **Cleaning And Maintenance**

1. Always remove the plug from the receptacle and allow heater to cool. Wipe heater with a soft, damp cloth. Do not use detergents and abrasives.
2. If the heater is not in use for an extended period of time, wind the cable around the holder and store it in a dry place.
3. In case of a malfunction, do not try to repair the heater by yourself. It may result in a fire hazard or electric shock.

# Specifications

Model	Power Supply	Rated Power
PSHO07JR4AGB	120V~, 60Hz	1500W



# SERVICE AND SUPPORT

In the event of a warranty claim, questions, comments or if service is required for this product, please contact us at the following:

Toll Free: 1-866-646-4332

Email us at: [customerservice@supportuscenter.com](mailto:customerservice@supportuscenter.com)

Midea America Corp.

Parsippany, NJ 07054

For your records, staple your sales receipt to this manual and record the following:

**DATE OF PURCHASE:** \_\_\_\_\_

**PLACE OF PURCHASE:** \_\_\_\_\_

**(STAPLE SALES RECEIPT HERE)**

**NOTE: PROOF OF PURCHASE  
IS REQUIRED FOR ALL WARRANTY CLAIMS  
PRINTED IN CHINA**

# ONE (1) YEAR LIMITED WARRANTY

- Please read all instructions before attempting to use this product.

PELONIS warrants as limited herein to the original purchaser of retail that each new Pelonis Product, shall be free of defects in material and workmanship for a period of one (1) year from the date of original purchase. This one (1) year warranty is limited to the heating elements, motor, and electric control circuit board.

In the event of malfunctions or failure of your Pelonis Product, simply deliver or send the heater, postage prepaid along with PROOF OF PURCHASE, within the warranty period of one (1) year, to PELONIS. PELONIS reserves the right to inspect the claimed defective part or parts to determine if the defect or malfunction complaint is covered by this warranty. PELONIS shall, within sixty (60) days after receipt of the product, at its option, repair and/or replace the defective part or parts free of charge. This warranty shall only cover defects arising from normal usage. PELONIS assumes no responsibility whatsoever if Product should fail during the warranty period by reason of:

- Misuse, negligence, physical damage or accidents.
- Lack of maintenance (see instructions for proper maintenance).
- Repair by any unauthorized party during the warranty period.
- Damage caused by connection to an improper input voltage (see specification label on your heater).

PELONIS makes no further warranties or representations, express or implied except those contained herein. No representative or dealer is authorized to assume any other liability regarding the Product. The duration of the implied warranty granted under State law, including warranties of merchantability and fitness for particular purpose are limited in duration should the duration of the express warranty grant it hereunder. PELONIS shall in no event be liable for direct, indirect, special or consequential damages.

Some states do not allow limitations on how long an implied warranty lasts, and/or the above limitations or exclusion may not apply to you. This warranty gives you specific legal rights and you may have other rights which vary from state to state.



**PELONIS**